

Rose User Guide Addendum (Beta 3.0)

Presets

The Rose pedal has 5 banks of presets to choose from, each bank containing 5 presets for a total of 25 presets.

Loading Presets Using the Footswitches

To Load a Preset from the currently selected Bank

- Press ACTIVE + HOTSWITCH (Footswitch LEDs = Orange)
- Tap HOTSWITCH to select Preset Slot indicated by the PRESET ladder
- Press ACTIVE to load Preset

To Change Preset Bank

- Press ACTIVE + HOTSWITCH (Footswitch LEDs = Orange)
- Hold HOTSWITCH alone until SHAPE LED is lit.
- Tap HOTSWITCH to select Preset Bank indicated by the SHAPE ladder

Loading Presets Using the Buttons

To Load a Preset from the currently selected Bank

- Momentarily press PRESET (PRESET + SHAPE LEDs are blinking)
- Press PRESET Button to select Preset Slot indicated on the PRESET ladder
- Preset loads when PRESET + SHAPE LEDs stop blinking

To Change Preset Bank & Load Preset

- Momentarily press PRESET (PRESET + SHAPE LEDs are blinking)
- Press SHAPE Button to select Preset Bank indicated by the SHAPE ladder
- Press PRESET to select a Preset Slot indicated on the PRESET ladder
- Preset loads when PRESET + SHAPE stop blinking

Saving Presets

- Press & Hold PRESET Button until PRESET + SHAPE LEDs are blinking
- Press SHAPE Button to select target Preset Bank
- Press PRESET to select target Preset Slot
- Hold PRESET Button until PRESET & SHAPE LED flashes rapidly
- Preset is now saved in selected Bank and Slot

MIDI Clock:

- Hold ACTIVE + PHI until all LEDs are on
- Press PHI to enable MIDI clock (bottom most Shape ladder LED lit) or disable MIDI clock (all SHAPE ladder LEDs off)
- Press ACTIVE or HOTSWITCH to exit

Bypass Mode/Kill-dry Mode:

- Hold ACTIVE + PHI until all LEDs are on
- Press PRESET to toggle different Bypass Modes (Buffer, Relay or Input Kill)
- Each Bypass Mode can stand alone or be paired with Kill-dry Mode
- Kill-dry is indicated by the bottom LED on the PRESET ladder
- Press ACTIVE or HOTSWITCH to exit

Hotswitch/Tap Tempo Divisions:

- Hold SHAPE Button until SHAPE + PRESET are blinking
- Press SHAPE Button to assign HOTSWITCH function to Tap Tempo (first LED)
- Press PRESET Button to select tap tempo/tap LFO divisions
- Available divisions are $\frac{1}{4}$ (top LED of Preset Ladder lit), $\frac{1}{8}$, dotted $\frac{1}{8}$ and triplet
- Press ACTIVE or HOTSWITCH to exit

AUX Switch:

- Hold HOTSWITCH + DELTA until PRESET and SHAPE are blinking
- Press SHAPE Button to cycle through Tap, Inf Rpt, Mod Hold, Mod Rst, A/B, PHI, DELTA, Bypass, Preset Load, Decrement Preset (Hotswitch LED green), Increment Preset (Hotswitch LED red) and Unassigned
- To assign AUX to BYPASS press SHAPE until ACTIVE LED is red
- To assign AUX to Preset Load press SHAPE until ACTIVE LED is yellow
- Press ACTIVE or HOTSWITCH to exit

Envelope Detune Effect:

- Press SHAPE Button to select Envelope Modulation on SHAPE ladder
- Set RATE knob fully counterclockwise
- Change DEPTH value using knob, Exp Pdl or MIDI

Known Issues

Please note that this update is still in beta and there are several known bugs:

- Sending MIDI program changes to presets outside the first bank can cause issues with the saved presets
- Tap tempo subdivision changes don't take effect when set until tempo is tapped in again.

To Download

To download the latest software, you will need to connect your device using a mini USB cable and download the [Eventide Direct Updater](#)